



## CJ1W-SCU42

Serial high-speed communication unit, 1x RS-232C port + 1x RS-422/485 port, Protocol Macro, Host Link, 1:N NT Link, No protocol, Serial Gateway (CompoWay/F, MODBUS-RTU, MODBUS-ASCII, Host Link), MODBUS RTU Slave, up to 230 kbps

# Specifications

I/O system	CJ I/O Bus
Expansion unit type	CPU Bus Unit
Type of module	Communication
IO-Link master	×
Communication port(s)	MODBUS Master, MODBUS Slave, Serial RS-232C, Serial RS-422, Serial RS-485
Number of communication ports	2
Max. data rate	230 kBit/s
Product Height (unpacked)	90 mm
Product Width (unpacked)	31 mm
Product Depth (unpacked)	81.9 mm
Product Weight (unpacked)	190 g

# Downloads

## CAD Library



**CJ Series Serial Communications Unit for NJ Series**  
Operation Manual

EN PDF 4.55 MB



**CJ-series -[RS-232C]-MARS TOHKEN SOLUTION MVF-300/500-series**  
Connection Guide

EN PDF 1.93 MB



**CJ-series -[RS-232C]-MARS TOHKEN TFIR-31LAN-series**  
Connection Guide

EN PDF 2.42 MB



**CJ-series -[RS-232C]-Shimadzu balance (ATX-R/ATY-R/UPX/UPY/UW/UX Series)**  
Connection Guide

EN PDF 2.34 MB



**CJ-series -[RS-232C]-V400-R2-series Ultra Small Multi-code Reader**  
Connection Guide

EN ZIP 2.55 MB



**CJ-series -[RS-232C]-V500-R2-series Fixed Laser-Type Barcode Reader**  
Connection Guide

EN ZIP 2.62 MB



### CJ-series -[RS-232C]-V750-series RFID System

Connection Guide

EN ZIP 1.94 MB



### CJ-series -[RS-232C]-ZW-7000-series Displacement Sensor

Connection Guide

EN ZIP 1.95 MB



### CJ-series -[RS-485 CompoWay/F]- Digital Temperature Controller (E5xD/E5xC/E5xC-T)

Connection Guide

EN PDF 3.3 MB



### CJ-series -[RS-485 CompoWay/F]- KM50 Smart Power Monitor

Connection Guide

EN ZIP 2.82 MB



### CJ-series -[RS-485 Modbus]- 3G3MX2-series Type V1

Connection Guide

EN ZIP 2.33 MB



### CJ-series -[RS-485 Modbus]- ORIENTAL MOTOR Alpha STEP AR-series

Connection Guide

EN ZIP 3.02 MB



### CJ-series -[RS-485 Modbus]- ORIENTAL MOTOR Alpha STEP AZ-series

Connection Guide

EN ZIP 2.98 MB



### CJ-series -[RS-485 Modbus]- ORIENTAL MOTOR BLE-series Brushless Motor

Connection Guide

EN ZIP 2.58 MB



### CJ-series -[RS-485 Modbus]- ORIENTAL MOTOR RK II-series Stepping Motor

Connection Guide

EN ZIP 3.79 MB



### CJ2-Series Programmable Controller

Datasheet

EN PDF 17.3 MB



### CP1 Series

Brochure

EN PDF 3.16 MB



### CS1 / CJ1 Serial Communications Boards

Operation Manual

EN PDF 5.88 MB



### CompoNet

Leaflet

EN PDF 13 MB



### DeviceNet

Brochure

EN PDF 471 KB



### EAC Mark removal

Discontinuation Notice

EN PDF 221 KB



### NJ-series -[RS-232C]-G9SP Safety Controller

Connection Guide

EN ZIP 4.5 MB



### NJ-series -[RS-232C]-V400-R2-series Ultra Small Multi-code Reader

Connection Guide

EN ZIP 4.64 MB



### NJ-series -[RS-232C]-V500-R2-series Fixed Laser-Type Barcode Reader

Connection Guide

EN ZIP 4.71 MB



### NJ-series -[RS-232C]-V750-series RFID System

Connection Guide

EN ZIP 5.11 MB



### NJ-series -[RS-232C]-ZW-series Displacement Sensor

Connection Guide

EN ZIP 4.68 MB



### NJ-series -[RS-485 CompoWay/F]-E5CC/E5EC/E5AC Digital Controller

Connection Guide

EN ZIP 4.71 MB



### NJ-series -[RS-485 CompoWay/F]-KM1/KE1-series

Connection Guide

EN ZIP 5.4 MB



### NJ-series -[RS-485 Modbus]- ORIENTAL MOTOR Alpha STEP AR-series

Connection Guide

EN ZIP 2.83 MB



### NJ-series -[RS-485 Modbus]- ORIENTAL MOTOR Alpha STEP AZ-series

Connection Guide

EN ZIP 3.01 MB



**NJ-series -[RS-485  
Modbus]- ORIENTAL  
MOTOR BLE-series  
Brushless Motor**

**Connection Guide**

**EN** ZIP 2.67 MB



**NJ-series -[RS-485  
Modbus]- ORIENTAL  
MOTOR RK II-series  
Stepping Motor**

**Connection Guide**

**EN** ZIP 5.5 MB