



## NJ101-9020

Sysmac NJ1 CPU with Database Connectivity, 3MB memory, built-in EtherCAT (0 servo axes, in total 64 EtherCAT nodes) and EtherNet/IP

# Specifications

<b>Controller functionality</b>	DB connection, Sequence control
<b>Max. number of synchronous axes</b>	0
<b>Max. number of axes (incl. virtual)</b>	0
<b>Primary task cycle time</b>	1 ms
<b>Program memory</b>	3 MB
<b>Variables memory</b>	0.5 MB
<b>Communication port(s)</b>	EtherCAT Master, EtherNet/IP, USB
<b>Communication option(s)</b>	CAN, CompoNet Master, DeviceNet Master, DeviceNet Slave, EtherCAT Slave, MODBUS Master, MODBUS Slave, PROFIBUS DP Master, PROFIBUS DP Slave, PROFINET Master, Serial RS-232C, Serial RS-422, Serial RS-485
<b>Max. number of remote I/O nodes</b>	64
<b>I/O system</b>	CJ I/O Bus
<b>Max. number of expansion units</b>	40
<b>Product Height (unpacked)</b>	97.5 mm
<b>Product Width (unpacked)</b>	90 mm
<b>Product Depth (unpacked)</b>	90 mm
<b>Product Weight (unpacked)</b>	550 g

## TERMS OF WEBSITE USE

This PDF document was created from the European OMRON Industrial Automation website on 13 October, 2024. Click here for [terms of use](#).

**OMRON**

INDUSTRIAL AUTOMATION | INDUSTRIAL.OMRON.EU

# Accessories



**GX-JC03**

3-port EtherCAT Junction module, 24 VDC power supply



**GX-JC06**

6-port EtherCAT Junction module, 24 VDC power supply



**GX-JC06-H**

6-port EtherCAT Junction module, 24 VDC power supply, with node switches

**HMC-SD493**

SD memory card, 4 GB



**NJ-PA3001**

Sysmac NJ power supply unit, 100-240 VAC, 30 W, "RUN" output relay



**NJ-PD3001**

Sysmac NJ power supply unit, 24 VDC, 30 W, "RUN" output relay



**W4S1-05D**

5-port enhanced Ethernet switch

# Spare parts



**CJ1W-BAT01**

Battery for CJ1M PLCs



**CJ1W-TER01**

End plate for CJ1 CPU rack or expansion rack. Only required as spare part.

# Downloads

## TERMS OF WEBSITE USE

This PDF document was created from the European OMRON Industrial Automation website on 13 October, 2024. Click here for [terms of use](#).

**OMRON**

INDUSTRIAL AUTOMATION | [INDUSTRIAL.OMRON.EU](https://www.industrial.omron.eu)

**EAC Mark removal  
Discontinuation Notice**

EN PDF 221 KB

**FDK CR14250SE  
Battery Safety Datasheet**

EN PDF 140 KB

**NJ-Series  
Datasheet**

EN PDF 5.82 MB

**NJ-Series CPU Unit  
Hardware  
Users Manual**

EN PDF 8.56 MB

**NJ-series -[DeviceNet]-  
3G3MX2-series Inverter  
Connection Guide**

EN ZIP 2.98 MB

**NJ-series -[DeviceNet]-  
3G3RX-V1-series  
Inverter  
Connection Guide**

EN ZIP 3.75 MB

**NJ-series -[DeviceNet]-  
ABB IRC5 Robot  
Controller  
Connection Guide**

EN ZIP 5.81 MB

**NJ-series -[DeviceNet]-  
NE1A-series Safety  
Network Controller  
Connection Guide**

EN PDF 3.47 MB

**NJ-series -[EtherCAT]-  
3G3MX2-series Inverter  
Connection Guide**

EN PDF 1.72 MB

**NJ-series -[EtherCAT]-  
3G3MX2-series Type V1  
Connection Guide**

EN PDF 2.18 MB

**NJ-series -[EtherCAT]-  
3G3RX-V1-series  
Inverter  
Connection Guide**

EN PDF 2.28 MB

**NJ-series -[EtherCAT]-  
Balluff BNI ECT-508  
Connection Guide**

EN PDF 1.85 MB

**NJ-series -[EtherCAT]-  
Balluff RFID (BIS V  
Series)  
Connection Guide**

EN PDF 1.76 MB

**NJ-series -[EtherCAT]-  
CKD MW4G-series  
NW4Gx-T7ECxxx (W4G-  
OPP8-xEC-xx)  
Connection Guide**

EN PDF 1.2 MB

**NJ-series -[EtherCAT]-  
Copley Accelnet  
Connection Guide**

EN ZIP 5.75 MB

**NJ-series -[EtherCAT]-  
Copley Xenus Plus XEL  
Connection Guide**

EN ZIP 3.81 MB

**NJ-series -[EtherCAT]-  
DELTA ELECTRONICS  
ASDA-A2-series  
Connection Guide**

EN ZIP 3.72 MB

**NJ-series -[EtherCAT]-  
DELTA R1-EC-series  
Slave Remote Module  
Connection Guide**

EN PDF 2.22 MB

**NJ-series -[EtherCAT]-  
DENSO WAVE RC8  
Robot Controller  
Connection Guide**

EN PDF 3.54 MB

**NJ-series -[EtherCAT]-  
E3NW-ECT Digital  
Sensor Communication  
Unit  
Connection Guide**

EN PDF 2.01 MB

**NJ-series -[EtherCAT]-  
E3X-ECT  
Connection Guide**

EN PDF 2.41 MB



### NJ-series -[EtherCAT]- Elmo Gold Solo Whistle Digital Servo Drive

Connection Guide

EN ZIP 3.49 MB



### NJ-series -[EtherCAT]- FANUC R-30iB Robot Controller

Connection Guide

EN PDF 3.82 MB



### NJ-series -[EtherCAT]- FESTO CPX-FB38 Valve Terminals MPA

Connection Guide

EN PDF 2.47 MB



### NJ-series -[EtherCAT]- FESTO CTEU-EC Valve Terminals VTUB-12

Connection Guide

EN PDF 2.52 MB



### NJ-series -[EtherCAT]- FESTO Valve Terminals MPA CPX-FB37

Connection Guide

EN PDF 2.01 MB



### NJ-series -[EtherCAT]- FH-series Vision System

Connection Guide

EN PDF 2.38 MB



### NJ-series -[EtherCAT]- FQ-MS12x(-M)-ECT Vision Sensor

Connection Guide

EN PDF 2.63 MB



### NJ-series -[EtherCAT]- GRT1-ECT SmartSlice

Connection Guide

EN PDF 2.9 MB



### NJ-series -[EtherCAT]- GX-ILM08C -[IO-Link]- Balluff Cylinder Sensor (BMF 203K)

Connection Guide

EN PDF 2.24 MB



### NJ-series -[EtherCAT]- GX-ILMxxx -[IO-Link]- E2E-series Proximity Sensor

Connection Guide

EN PDF 2.31 MB



### NJ-series -[EtherCAT]- GX-ILMxxx -[IO-Link]- E3Z-series Photoelectric Sensor

Connection Guide

EN PDF 2.24 MB



### NJ-series -[EtherCAT]- GX-series Analog I/O Terminal

Connection Guide

EN PDF 1.74 MB



### NJ-series -[EtherCAT]- GX-series Digital I/O Terminal

Connection Guide

EN PDF 1.74 MB



### NJ-series -[EtherCAT]- GX-series Encoder Input Terminal

Connection Guide

EN PDF 1.75 MB



### NJ-series -[EtherCAT]- HENGSTLER ACURO(R) AC58-series Absolute Encoder

Connection Guide

EN PDF 1.47 MB



### NJ-series -[EtherCAT]- HIWIN D1-N-series

Connection Guide

EN ZIP 3.85 MB



### NJ-series -[EtherCAT]- HMS Anybus Communicator

Connection Guide

EN PDF 1.93 MB



### NJ-series -[EtherCAT]- HMS Anybus X-gateway

Connection Guide

EN PDF 3.16 MB



### NJ-series -[EtherCAT]- HORIBA STEC SEC- Z500X-series Mass Flow Controller

Connection Guide

EN PDF 1.5 MB



### NJ-series -[EtherCAT]- Hivertec HES-C400/NJ

Connection Guide

EN PDF 2.14 MB



### NJ-series -[EtherCAT]- Hivertec HES-M4xx/NJ

Connection Guide

EN PDF 1.89 MB



### NJ-series -[EtherCAT]- IAI ACON/ACON- CA/PCON/PCON- CA/DCON-CA Controller

Connection Guide

EN PDF 1.38 MB



### NJ-series -[EtherCAT]- IAI Corporation MCON Controller

Connection Guide

EN PDF 2.88 MB



### NJ-series -[EtherCAT]- IAI Corporation MSEP Controller

Connection Guide

EN PDF 1.48 MB

## TERMS OF WEBSITE USE

This PDF document was created from the European OMRON Industrial Automation website on 13 October, 2024. Click here for [terms of use](#).

# OMRON

INDUSTRIAL AUTOMATION | INDUSTRIAL.OMRON.EU



### NJ-series -[EtherCAT]- IAI SCION-CA/SCON-CAL Controller

Connection Guide

EN PDF 2.12 MB



### NJ-series -[EtherCAT]- IAI X-SEL Controller XSEL-R/S/RX/SX/RXD/SXD

Connection Guide

EN PDF 2.67 MB



### NJ-series -[EtherCAT]- KYOWA SENERGY Controller (MotionLinX Series)

Connection Guide

EN PDF 1.72 MB



### NJ-series -[EtherCAT]- M-System R30-series Remote I/O

Connection Guide

EN PDF 1.74 MB



### NJ-series -[EtherCAT]- M-System R8-series Remote I/O

Connection Guide

EN PDF 2.19 MB



### NJ-series -[EtherCAT]- MTS KG R-series Linear Position Sensors

Connection Guide

EN PDF 2.46 MB



### NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- E2E-series Proximity Sensor

Connection Guide

EN PDF 2.44 MB



### NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- E3Z-series Photoelectric Sensor

Connection Guide

EN PDF 2.5 MB



### NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- FESTO SFAW-series W Flow Sensor

Connection Guide

EN PDF 2.62 MB



### NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- FESTO SPAE-Pressure Sensor

Connection Guide

EN PDF 2.42 MB



### NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- FESTO VPPM-series

Connection Guide

EN PDF 2.35 MB



### NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- Piab AB Vac.Ejector piCOMPACT23

Connection Guide

EN PDF 2.68 MB



### NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- Turck I/O Hub (TBIL)

Connection Guide

EN PDF 2.76 MB



### NJ-series -[EtherCAT]- NX-PG0122 -[Pulse]- ORIENTAL MOTOR RK II Stepping Motor

Connection Guide

EN ZIP 6.11 MB



### NJ-series -[EtherCAT]- NX-PG0122 -[Pulse]- ORIENTAL MOTOR Stepping Motor Alpha STEP

Connection Guide

EN ZIP 8.5 MB



### NJ-series -[EtherCAT]- ORIENTAL MOTOR NETC01-ECT Network Converter

Connection Guide

EN PDF 2.96 MB



### NJ-series -[EtherCAT]- ORIENTAL MOTOR aSTEP DC Multi-Axis Drive (AZDxA-KED)

Connection Guide

EN PDF 3.99 MB



### NJ-series -[EtherCAT]- PHOENIX CONTACT AXL E EcX Axioline E

Connection Guide

EN PDF 2.71 MB



### NJ-series -[EtherCAT]- PHOENIX CONTACT Axioline F-series I/O system

Connection Guide

EN PDF 2.07 MB



### NJ-series -[EtherCAT]- SANYO DENKI SANMOTION R TYPE S

Connection Guide

EN ZIP 4.28 MB



### NJ-series -[EtherCAT]- SMC EX180-SEC5-X23x SI Unit

Connection Guide

EN PDF 2.04 MB



### NJ-series -[EtherCAT]- SMC EX260-SECx SI Unit

Connection Guide

EN PDF 2.14 MB



### NJ-series -[EtherCAT]- SMC EX600-SECx SI Unit

Connection Guide

EN PDF 2.62 MB



### NJ-series -[EtherCAT]- SMC IN587 SI unit

Connection Guide

EN PDF 2.27 MB



### NJ-series -[EtherCAT]- SMC JXCE1 Direct input type Step Motor Controller

Connection Guide

EN PDF 1.59 MB



### NJ-series -[EtherCAT]- THK Network Unit TNU- EC Electrical Actuator Controller

Connection Guide

EN PDF 2.28 MB



### NJ-series -[EtherCAT]- Turck BL20-E-GW-EC Gateway

Connection Guide

EN PDF 2.13 MB



### NJ-series -[EtherCAT]- VAT 612/615/642/650/652/951/952/ Control Valve

Connection Guide

EN PDF 2.91 MB



### NJ-series -[EtherCAT]- WAGO I/O-SYSTEM 750- series Fieldbus Coupler

Connection Guide

EN PDF 2.55 MB



### NJ-series -[EtherCAT]- YASKAWA Sigma V- series SGDV-xxxxE1

Connection Guide

EN ZIP 6.95 MB



### NJ-series -[EtherCAT]- ZW-7000-series Displacement Sensor

Connection Guide

EN PDF 2.11 MB



### NJ-series -[EtherCAT]- ZW-CE1 Displacement Sensor

Connection Guide

EN PDF 1.98 MB



### NJ-series -[EtherNet/IP]- ABB IRC5 Robot Controller

Connection Guide

EN ZIP 6.44 MB



### NJ-series -[EtherNet/IP]- CJ2-series Controller

Connection Guide

EN ZIP 6.41 MB



### NJ-series -[EtherNet/IP]- DENSO WAVE RC7M Robot Controller

Connection Guide

EN ZIP 3.83 MB



### NJ-series -[EtherNet/IP]- DENSO WAVE RC8 Robot Controller

Connection Guide

EN ZIP 5.39 MB



### NJ-series -[EtherNet/IP]- FH-series Vision System

Connection Guide

EN ZIP 1.96 MB



### NJ-series -[EtherNet/IP]- FQ2-series Smart Camera

Connection Guide

EN ZIP 3.55 MB



### NJ-series -[EtherNet/IP]- FZ4-series Vision Sensor

Connection Guide

EN ZIP 1.74 MB



### NJ-series -[EtherNet/IP]- FZ5-series Vision System

Connection Guide

EN ZIP 1.93 MB



### NJ-series -[EtherNet/IP]- IAI Corporation ACON/PCON/DCON/SCON Controller

Connection Guide

EN ZIP 2.73 MB



### NJ-series -[EtherNet/IP]- IAI Corporation XSEL- Rx/Sx Controller

Connection Guide

EN ZIP 4.93 MB



### NJ-series -[EtherNet/IP]- Nidec Sankyo SC5000- series

Connection Guide

EN ZIP 7.36 MB



### NJ-series -[EtherNet/IP]- Omron Adept Robot ePLC

Connection Guide

EN ZIP 2.47 MB



### NJ-series -[EtherNet/IP]- Omron Adept Robot ePLC

Connection Guide

EN ZIP 2.6 MB



### NJ-series -[EtherNet/IP]- PHOENIX CONTACT AXL E-series I/O Device

Connection Guide

EN ZIP 2.22 MB



### NJ-series -[EtherNet/IP]- SMC AMS-S Series

Connection Guide

EN PDF 2.23 MB



### NJ-series -[EtherNet/IP]- SMC EX600-SENx SI Unit

Connection Guide

EN ZIP 2.59 MB

#### TERMS OF WEBSITE USE

This PDF document was created from the European OMRON Industrial Automation website on 13 October, 2024. [Click here for terms of use.](#)

**OMRON**

INDUSTRIAL AUTOMATION | INDUSTRIAL.OMRON.EU



### NJ-series -[EtherNet/IP]- SMC JXC91 Step Motor Controller

Connection Guide

EN PDF 2.1 MB



### NJ-series -[EtherNet/IP]- Seiko Epson RC180 Robot Controller

Connection Guide

EN ZIP 2.6 MB



### NJ-series -[EtherNet/IP]- Turck BL20-E-GW-EN Multiprotocol Gateway

Connection Guide

EN ZIP 2.21 MB



### NJ-series -[EtherNet/IP]- Turck TBEN-series Compact Block I/O-module

Connection Guide

EN ZIP 1.57 MB



### NJ-series -[EtherNet/IP]- V680S-series RFID

Connection Guide

EN ZIP 2.28 MB



### NJ-series -[EtherNet/IP]- WAGO I/O-SYSTEM 750-series Ethernet Fieldbus Coupler

Connection Guide

EN ZIP 2.44 MB



### NJ-series -[EtherNet/IP]- Yamaha Motor RCX-series Robot Controller

Connection Guide

EN ZIP 3.98 MB



### NJ-series -[EtherNet/IP]- Yamaha Motor TS-series Single-axis Robot Controller

Connection Guide

EN ZIP 5.84 MB



### NJ-series -[EtherNet/IP]- Yamaha RCX340 Robot Controller

Connection Guide

EN ZIP 4.75 MB



### NJ-series -[EtherNet/IP]- ZW-7000-series Displacement Sensor

Connection Guide

EN ZIP 2.52 MB



### NJ-series -[EtherNet/IP]- ZW-CE1 Displacement Sensor

Connection Guide

EN ZIP 4.26 MB



### NJ-series -[Ethernet TCP/IP]- FQ-CR-series

Connection Guide

EN ZIP 3.11 MB



### NJ-series -[Ethernet TCP/IP]- Hioki LCR Meter (IM3536)

Connection Guide

EN PDF 2.13 MB



### NJ-series -[Ethernet TCP/IP]- Janome Sewing Machine JR3000-series Robot

Connection Guide

EN ZIP 1.85 MB



### NJ-series -[Ethernet TCP/IP]- MARS TOHKEN 2D Image Reader (MVF-300/500 Series)

Connection Guide

EN PDF 2.05 MB



### NJ-series -[Ethernet TCP/IP]- SCHOTT MORITEX MLEF-series Digital Controller

Connection Guide

EN ZIP 2.75 MB



### NJ-series -[Ethernet TCP/IP]- V750-series RFID System

Connection Guide

EN ZIP 4.7 MB



### NJ-series -[Ethernet TCP/IP]- ZW-series Displacement Sensor

Connection Guide

EN ZIP 4.35 MB



### NJ-series -[RS-232C]- G9SP Safety Controller

Connection Guide

EN ZIP 4.5 MB



### NJ-series -[RS-232C]- V400-R2-series Ultra Small Multi-code Reader

Connection Guide

EN ZIP 4.64 MB



### NJ-series -[RS-232C]- V500-R2-series Fixed Laser-Type Barcode Reader

Connection Guide

EN ZIP 4.71 MB



### NJ-series -[RS-232C]- V750-series RFID System

Connection Guide

EN ZIP 5.11 MB



### NJ-series -[RS-232C]- ZW-series Displacement Sensor

Connection Guide

EN ZIP 4.68 MB



### NJ-series -[RS-485 CompoWay/F]- E5CC/E5EC/E5AC Digital Controller

Connection Guide

EN ZIP 4.71 MB

#### TERMS OF WEBSITE USE

This PDF document was created from the European OMRON Industrial Automation website on 13 October, 2024. Click here for [terms of use](#).







### NJ-series -[RS-485 CompoWay/F]-KM1/KE1-series

#### Connection Guide

EN ZIP 5.4 MB



### NJ-series -[RS-485 Modbus]- ORIENTAL MOTOR Alpha STEP AR-series

#### Connection Guide

EN ZIP 2.83 MB



### NJ-series -[RS-485 Modbus]- ORIENTAL MOTOR Alpha STEP AZ-series

#### Connection Guide

EN ZIP 3.01 MB



### NJ-series -[RS-485 Modbus]- ORIENTAL MOTOR BLE-series Brushless Motor

#### Connection Guide

EN ZIP 2.67 MB



### NJ-series -[RS-485 Modbus]- ORIENTAL MOTOR RK II-series Stepping Motor

#### Connection Guide

EN ZIP 5.5 MB



### NJ/NX Series

#### Brochure

EN PDF 4.91 MB



### NJ/NX-Series CPU Unit Built-in EtherCAT Port

#### Users Manual

EN PDF 17.5 MB



### NJ/NX-Series CPU Unit Built-in EtherNet/IP Port

#### Users Manual

EN PDF 19.3 MB



### NJ/NX-Series CPU Unit Motion Control

#### Users Manual

EN PDF 19.8 MB



### NJ/NX-Series CPU Unit Software

#### Users Manual

EN PDF 24.2 MB



### NJ/NX-Series Database Connection CPU Units

#### Users Manual

EN PDF 5.16 MB



### NJ/NX-Series Instructions

#### Reference Manual

EN PDF 11.6 MB



### NJ/NX-Series Motion Control Instructions

#### Reference Manual

EN PDF 7.13 MB



### NJ/NX-series - [EtherCAT]- CKD ABSODEX driver (AX9000TS/TH-U5)

#### Connection Guide

EN PDF 1.73 MB



### NJ/NX-series - [EtherCAT]- Denso Wave RC9 Robot

#### Connection Guide

EN PDF 2.72 MB



### NJ/NX-series - [EtherCAT]- Festo CPX-AP-I

#### Connection Guide

EN PDF 1.37 MB



### NJ/NX-series - [EtherCAT]- Festo MSE6-E2M

#### Connection Guide

EN PDF 1.6 MB



### NJ/NX-series - [EtherCAT]- HMS Anybus X-gateway ABX

#### Connection Guide

EN PDF 1.96 MB



### NJ/NX-series - [EtherCAT]- Hitachi ADV-Series AC Servo Drives

#### Connection Guide

EN ZIP 4.29 MB



### NJ/NX-series - [EtherCAT]- Inficon gauge (BPG402-SE)

#### Connection Guide

EN PDF 1.22 MB



### NJ/NX-series - [EtherCAT]- Kashiyaama Dry Vacuum Pump (E-CAT01 1ch)

#### Connection Guide

EN PDF 1.59 MB



### NJ/NX-series - [EtherCAT]- Kashiyaama Dry Vacuum Pump (E-CAT02)

#### Connection Guide

EN PDF 1.61 MB



### NJ/NX-series - [EtherCAT]- Kawasaki F-series Robot Controller F60

#### Connection Guide

EN PDF 2.32 MB



### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]-CKD Sensor (PPX series)

#### Connection Guide

EN PDF 2.43 MB

## TERMS OF WEBSITE USE

This PDF document was created from the European OMRON Industrial Automation website on 13 October, 2024. [Click here for terms of use.](#)





### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- CKD Sensor (WFC series)

Connection Guide

EN PDF 2.75 MB



### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- CKD WFK2 Flow sensor

Connection Guide

EN PDF 2.09 MB



### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- MTS Sensors (E-Series)

Connection Guide

EN PDF 2.4 MB



### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- PATLITE Beacon (NE-IL)

Connection Guide

EN PDF 2.02 MB



### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- PATLITE Tower (LR6-IL)

Connection Guide

EN PDF 2.08 MB



### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- SMC (ISA3-xxx)

Connection Guide

EN PDF 2.61 MB



### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- SMC (xSE20Bx-L(-M/-P)-x)

Connection Guide

EN PDF 2.13 MB



### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- SMC ITVx000/-IO\*

Connection Guide

EN PDF 1.89 MB



### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- SMC Servo 24VDC (JXCL1)

Connection Guide

EN PDF 2.23 MB



### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- Schmalz Ejector (SCPSi)

Connection Guide

EN PDF 2.4 MB



### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- ifm (O5D10x/O5D15x)

Connection Guide

EN PDF 2.42 MB



### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- ifm (PN7x94)

Connection Guide

EN PDF 2.72 MB



### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- ifm (TN24xx)

Connection Guide

EN PDF 2.74 MB



### NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- ifm TR7439 Pt100/1000

Connection Guide

EN PDF 2.43 MB



### NJ/NX-series - [EtherCAT]- Nidec Sankyo S-FLAG II Series AC Servo (DB6xx41)

Connection Guide

EN PDF 2.65 MB



### NJ/NX-series - [EtherCAT]- NittoSeiko SD600T driver controller

Connection Guide

EN PDF 2.18 MB



### NJ/NX-series - [EtherCAT]- Oriental Motor Alpha STEP AZ series

Connection Guide

EN PDF 3.47 MB



### NJ/NX-series - [EtherCAT]- SANYO DENKI AC Servo SANMOTION R 3E MODEL TYPE S

Connection Guide

EN PDF 3.08 MB



### NJ/NX-series - [EtherCAT]- SANYO DENKI AC Servo SANMOTION R ADVANCED MODEL TYPE F

Connection Guide

EN PDF 3.61 MB



### NJ/NX-series - [EtherCAT]- SHIMADZU Power Unit for Turbo Molecular Pump (TMP)

Connection Guide

EN PDF 1.29 MB



### NJ/NX-series - [EtherCAT]- SICK Absolute Encoder (AFS60/AFM60)

Connection Guide

EN PDF 1.52 MB



### NJ/NX-series - [EtherCAT]- Schmalz Compact Terminal (SCTSi-ECT)

Connection Guide

EN PDF 1.33 MB



### NJ/NX-series - [EtherCAT]- Unipulse Weighing Indicator (FC400-ECT)

Connection Guide

EN PDF 1.72 MB



### NJ/NX-series - [EtherCAT]- Weidmüller Remote I/O System (u-remote IP20)

Connection Guide

EN PDF 1.8 MB



### NJ/NX-series - [EtherCAT]- YASKAWA Sigma 7-series

Connection Guide

EN ZIP 3.77 MB



### NJ/NX-series -[EtherNet TCP/IP]- HIOKI Battery HiTESTER (BT356)[A]

Connection Guide

EN PDF 2.27 MB



### NJ/NX-series - [EtherNet/IP]- Balluff BNI EIP-50x-105-Z015

Connection Guide

EN PDF 3.35 MB



### NJ/NX-series - [EtherNet/IP]- CKD ABSODEX Driver (AX9000TS/TH-U6)

Connection Guide

EN PDF 1.71 MB



### NJ/NX-series - [EtherNet/IP]- HMS Anybus Communicator

Connection Guide

EN PDF 1.51 MB



### NJ/NX-series - [EtherNet/IP]- HMS Anybus X-gateway

Connection Guide

EN PDF 1.79 MB



### NJ/NX-series - [EtherNet/IP]- Hilscher netTAP NT100 Gateway (NT 100-RE-DN)

Connection Guide

EN PDF 3.5 MB



### NJ/NX-series - [EtherNet/IP]- IAI RCON system & MCON / MCON / MSEP Controller

Connection Guide

EN PDF 1.9 MB



### NJ/NX-series - [EtherNet/IP]- KOGANEI Manifold Solenoid Valve (F Series)

Connection Guide

EN PDF 2.43 MB



### NJ/NX-series - [EtherNet/IP]- Magnescale Digital Gauge (MG80-EI)

Connection Guide

EN PDF 1.84 MB



### NJ/NX-series - [EtherNet/IP]- Nordson ProBlue Adhesive Melters

Connection Guide

EN PDF 2.61 MB



### NJ/NX-series - [EtherNet/IP]- ORIENTAL MOTOR Alpha STEP Compatible Driver (AZD-xEP)

Connection Guide

EN PDF 1.82 MB



### NJ/NX-series - [EtherNet/IP]- SMC Solenoid Valve (SI Unit EX260-SEN#)

Connection Guide

EN PDF 1.65 MB



### NJ/NX-series - [EtherNet/IP]- Schmalz K.K. Compact Terminal (SCTSi-EIP)

Connection Guide

EN PDF 1.69 MB



### NJ/NX-series - [EtherNet/IP]- Unipulse FC400-EIP

Connection Guide

EN PDF 2.26 MB



### NJ/NX-series - [EtherNet/IP]- Unipulse FS2000-EIP

Connection Guide

EN PDF 3.38 MB



### NJ/NX-series - [EtherNet/IP]- ifm IO-Link master (AL1322)

Connection Guide

EN PDF 3.18 MB



### NJ/NX-series - [EtherNet/IP]- ifm IO-Link master (AL1920)

Connection Guide

EN PDF 3.07 MB



### NJ/NX-series Machine Automation Controller Database Connection CPU Unit

Brochure

EN PDF 1.34 MB



### NJ/NX/NY-series Sysmac Library User's Manual for Safety System Monitor Library

Users Manual

EN PDF 922 KB



### NX1 Boost Machine Performance

Leaflet

EN PDF 1.88 MB



### NX1 Boost the Productivity

Leaflet

EN PDF 547 KB



### NX1 Production Data Visibility

Leaflet

EN PDF 572 KB



### NX1-series + NX-ILM400-[IO-Link]- SMC D-MP# Actuator Position Sensor

Connection Guide

EN PDF 1.88 MB



### OEN Sample and Library files

#### Connection Guide

EN ZIP 9.25 MB



### Omron GX-JC0x-x EtherCAT Junction Box

#### EtherCAT ESI file

 
EN ZIP 3.36 KB



### Redundancy and Motion Safety

#### Flyer

EN PDF 960 KB



### Sysmac Catalogue

EN PDF 43.5 MB



### Sysmac: A Fully Integrated Platform Brochure

EN PDF 11.8 MB